

PROJECT NAME:

FILE #


ID_DS_MITER_METHOD




NDS
We put water in its place

MITER DETAIL


(2) CUTS TO THE REQUIRED ANGLE

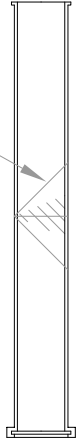



STEP 1:
CUT PLYWOOD
TEMPLATE TO FIT THE
MITERED CHANNEL

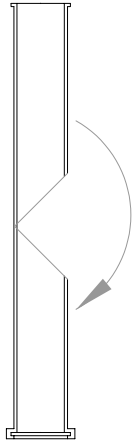

STEP 2:
ATTACH MITER
CHANNELS TOGETHER
USING WATERPROOF
OR CONSTRUCTION
ADHESIVE

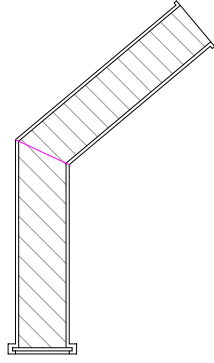

STEP 3
ATTACHE TEMPLATE
TO CHANNEL USING
SELF TAPPING SCREWS
TO SECURE CHANNEL

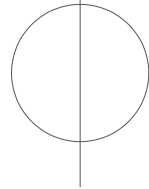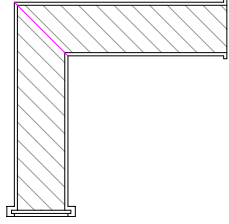

DURA SLOPE - MITER METHOD

MITERS CAN ALWAYS BE DONE ON NEUTRAL CHANNELS ONLY